



<http://www.samsungy'p'p.com>

Samsung Electronics America Inc.
105 Challenger Road, Ridgefield Park, N.J. 07660

SERVICE DIVISION
400 Valley Road, Suite 201
Mount Arlington, NJ 07856
TEL: 1-800-SAMSUNG (1-800-726-7864)

AH68-01283B (Rev 2.0)

SAMSUNG

YP-35

DIGITAL AUDIO PLAYER

y'p'p™



MP3 & WMA Playback
Removable Storage Device
3D Stereo Sound
Upgradable
Long Battery Life of up to 15hrs



Contents

Preparations

Safety Instructions	4
Features	6
Components	9
Location of Controls (yopp)	10

Connection to Computer

Connecting yopp to PC	12
Manual Installation of USB Driver	16
Using the removable storage.....	20
• Downloading/Uploading files	20
• Disconnecting the USB cable	21
• Formatting	22
Installing CD Ripper	23

Basic Usage

Listening to Music with yopp	24
Setting up Volume/Hold Functions	25
Changing Modes	26
Recording Voice.....	27
Searching for Music/Voice Files	28

Additional Usage

Loop Repeating	30
Setting up SRS	31
Setting up MENU	32
Repeating Tracks	33
Setting up EQ	34
Managing Files	35
• Deleting	35
• Formatting	36
Customizing Options (Display)	37
• DISPLAY	38
• BACKLIGHT	38
• BEEP	39
• CONTRAST	39
• SCROLL SPEED	40
• POWER OFF TIME	40
• DEFAULT VOLUME	41
• WOW LEVEL	41
Firmware Upgrade	42

Appendix


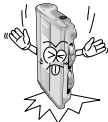 

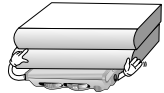 

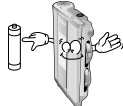 
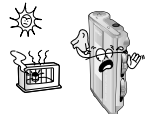 

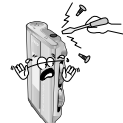 
Description of Buttons (yopp player)	44
MENU Table	46

Customer Support

Troubleshooting	48
Specifications.....	50
Safety Information	52
Warranty	54

Safety Instructions

Read and understand all the instructions to avoid injury to yourself and damage to the equipment.

<p>Do not expose to extreme temperatures (above 95°F or below 23°F). Do not expose to moisture.</p> 	<p>Do not apply excessive pressure to the device.</p> 	<p>Do not let any foreign matter spill into the device.</p> 
<p>Do not place heavy objects on top of the device.</p> 	<p>Do not expose to chemicals such as benzene and thinners.</p> 	<p>Remove batteries when the device is left unused for a long period of time.</p> 
<p>Do not expose to direct sunlight or heat sources.</p> 	<p>Do not store in dusty areas.</p> 	<p>Do not try to disassemble and repair the device yourself.</p> 

Earphones

Follow Traffic Safety Instructions

- Do not use the earphones while driving an automobile or riding a bicycle. It's not only dangerous, but also against the law.
- It may cause an accident if you turn up the volume of the earphones while walking down the street, especially crossing at intersections.

Protect your ears

- Do not turn up the volume too high. Doctors warn against prolonged exposure to high volume.
- Stop using the device or turn the volume down if you have ringing in your ears.

Ambient operating conditions

- Ambient temperature: 5°C ~ 35°C (41°F ~ 95°F)
Humidity : 10 ~ 75%

Environmental Information

- Follow local guidelines for waste disposal when discarding packages, batteries, and old electronic appliances.
- Yepp packages use cardboard, polyethylene etc., and do not use any unnecessary materials.

DIGITAL SOUND yepp'

Miniature Design

Convenient small and light design

Removable Storage Device

You can easily copy and paste files to the yepp player using Windows Explorer

Upgradable

You can upgrade the built-in programs if available.

ex) Add functions, CODEC, etc.

Please check the yepp home page (<http://www.samsungyepp.com>) for upgrades.

DIGITAL SOUND yepp'

MP3 & WMA Playback

MP3 is an MPEG1 Layer3 audio format.

WMA is an Microsoft Windows Media audio format.

Playing Time

This unit uses one AAA/LR03 alkaline battery. Operation can last up to 15 hours. Actual playing time may vary according to the type and capacity of the battery.

Featuring 3D Sound

The 3D feature adds spaciousness to the sound.

DIGITAL SOUND yep!

Voice Recording Function

Suitable for recording lectures, meetings.

Backlight

Attractive Blue-Color Backlight

Sound

You can adjust the equalizer manually.

Components



yep!

Player



Earphones
AH30-00056B



USB Cable
AH39-00498A



 
User manual
AH68-01283B



One Battery
(1.5V AAA/LR03 type)
4301-000115



Neck Strap
AH61-01370A



Belt Clip
AH61-01411A




installation CD
AH80-00051C


Model	YP-35 S	YP-35 H
Built-in memory	64MB	128MB

- The capacity of the useable built-in memory is less than indicated as the internal firmware uses a part of the memory as well.
- Design of accessories is subject to change for improvement without notice.

 
Location of Controls (yepp)

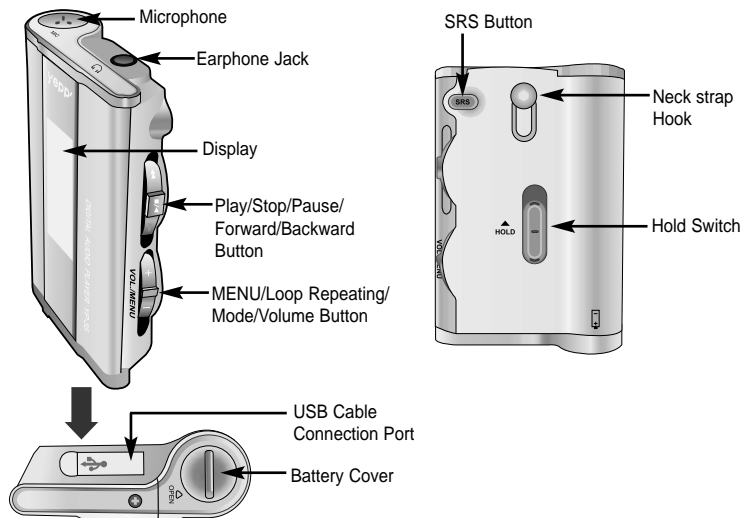

Display

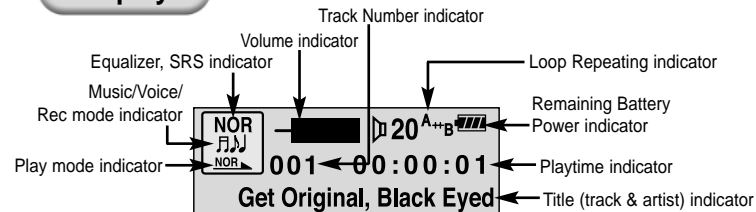 

Inserting a Battery

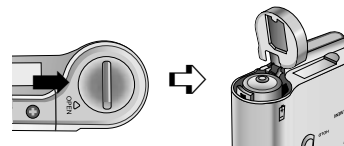 

- 1 Slide the cover in the direction of the arrow to open.
- 2 Insert a battery to the right poles **+**, **-** and push-close the cover in the direction the arrow as indicated.

Connecting yepp to PC

System Requirements.

- Pentium 133MHz or greater
- Windows 98 SE/ME/2000/XP
- 20MB of available hard disk space
- CD-ROM drive
- (double speed or greater)
- USB port (1.1) supported
- VGA graphic

 
Note :

- Install the operating system in Administrator Account mode for Windows 2000 or XP. Otherwise, installation will not be completed.
- Windows ME, 2000 and XP can recognize the driver without installing the provided program. However, you must install the program in order to format yepp and upgrade firmware.
- If the YP-35 program has not been installed in Windows 98, then it will not communicate with your removable disk. You must install the USB driver file first.


Before connecting yepp to PC, make sure to install USB driver. If "Add New Hardware Wizard" appears, press the [Cancel] button and install USB driver.

Installing software

- 1** Insert the Installation CD into CD-ROM drive. The picture shown below appears. Select [USB Driver Install].

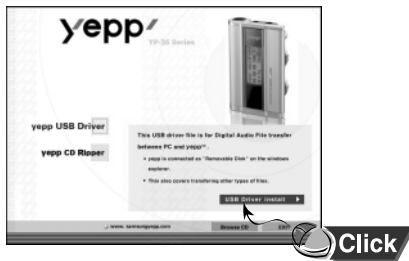

 - 2** Click [Next] in the series of windows that appear.

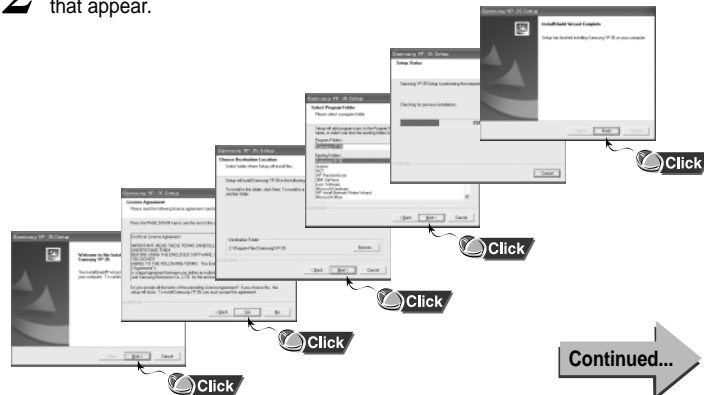


When installation is completed, connect yepp to PC and use it as shown on the next page.

Continued...

Connecting yepp to PC with USB cable

 - 3 Plug one end of the USB cable into the USB port on the back of the PC.
 - The yepp will automatically turn on.
- 4 Connect the opposite end of the USB cable to the USB cable port on the bottom of the yepp.
 - PC may temporarily malfunction if you unplug the USB cable from PC while yepp Explorer is initiating or executing a command.
- 5 USB driver is installed with a message saying that it is searching for a new device. You may not see the display screen during installation. Go to the device manager to check that installation has been successfully completed.
- 6 Upon installation of the USB driver "SAMSUNG YP-35" will appear in the [System Properties] → [Device Manager].

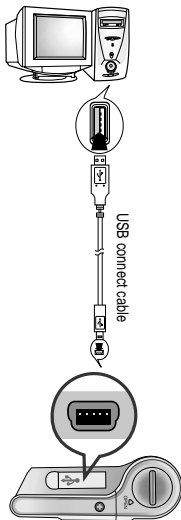

Note :

How to check USB driver

Windows 98:

Control Panel → System → Device Manager → Universal Serial Bus controllers/SCSI and RAID controllers

Windows 2000:

Control Panel → System → Hardware → Device Manager → Universal Serial Bus controllers → USB Mass Storage Device

Windows XP:

Control Panel → System → Hardware → Device Manager → Universal Serial Bus controllers → USB Mass Storage Device

Note :

If the YP-35 program has not been installed in Windows 98, then it will not communicate with you're your solid disk. You must install the USB driver file first.



- 7 When USB driver is not Installed automatically, refer to next page.

Note :

 
For WinXP, the following window will appear whenever you connect the USB cable to your YP-35.



Manual Installation of USB Driver

Go to "Downloading/Uploading files" on page 20 if the USB driver is in place.
Follow these steps if the USB driver is not in place :

- 1 Check the device manager.
Windows 98, ME:
Control Panel → System → Device Manager
Windows 2000:
Control Panel → System → Hardware → Device Manager
Windows XP:
Control Panel → System → Hardware → Device Manager

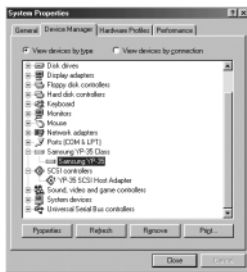


- 2 Check if there is a device listed with an exclamation point or a question mark (displayed as unknown device or USB device).

- 3 Double click on the device listed with an exclamation point or a question mark.

Note :

- If you are using Windows 2000 and your version of Windows does not recognize the USB driver, please download and install the latest service pack from windowsupdate.microsoft.com
- The installation method may vary depending on the type of PC or operating system. Contact your PC dealer or service center for installation information.
- If errors occur continuously when you install the USB driver, reconnect the USB cable after rebooting your system.

 - 4 After selecting the driver, click on **[Update Driver]**.

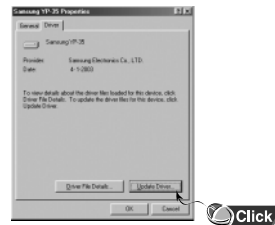

- 5 Select a compatible driver, click on **[Next]** to finish.



For Windows 98, refer to page 18.

Continued...

In Windows 98

 
Click **[Next]** button in the series of windows that appear.



Click



Click

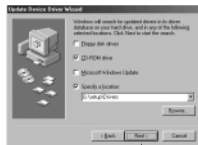

Click

USB driver location
[CD ROM]\setup\Drivers



Click



 
Click

- To complete the installation process, reboot the system.

Using the removable storage

Downloading/Uploading files

- 1 Turn on the yepp and connect yepp to PC.
- 2 Open Windows Explorer on PC.
- 3 Select the file to save and drag-and-drop it into the removable disk icon.
The saved files will be played in the order of file name.
If you want to change the order, please change the file name.

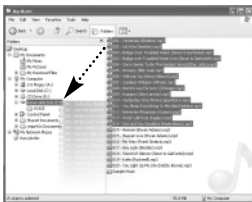

Notice :

- The "WRITING/READING" message will appear during file download or upload. Disconnecting the USB cable while "WRITING/READING" is displayed may cause malfunction of the unit.
- Files within a user created folder can only be played in Music Mode.
- The order of music files is not relative to the replay order when you select a Solid Disk in Windows Explorer.

Disconnecting the USB cable

After completing the file transmission, you must disconnect the cable in the following way:

 
- 1 Double-click on the green arrow in the taskbar on the bottom right of the window. Disconnect the USB cable.
- 2 Select the USB device, and then press the [Stop] button.



Click



Click

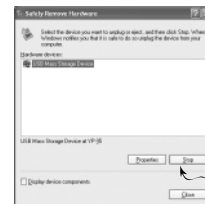


Click

Installing CD Ripper

Formatting

 - 1** Select the removable disk icon and click the right mouse button to select **[Format]**.

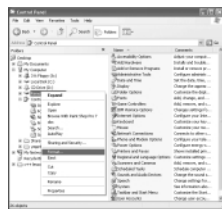

- 2** Press the **[Start]** button.
- All saved files will be formatted.
 - You can change the name of removable disk by selecting **[Volume label]**.



Notice :

 
- You must format YP-35 with the provided formatting program only . The device cannot read data if you attempt to format without the YP-35 program. (The 'Please Reformat' message will appear on the main body.) Format only after you have installed the YP-35 program.
- Care must be taken as formatted files can not be recovered.
- By formatting, all previously preset menus will be initialized.

Note :

- You can format by executing "YP-35 Format" located under **[Start] → [All Programs]**

Insert the Installation CD in the CD-ROM drive.

Click **[Next]** button in the series of windows that appear.

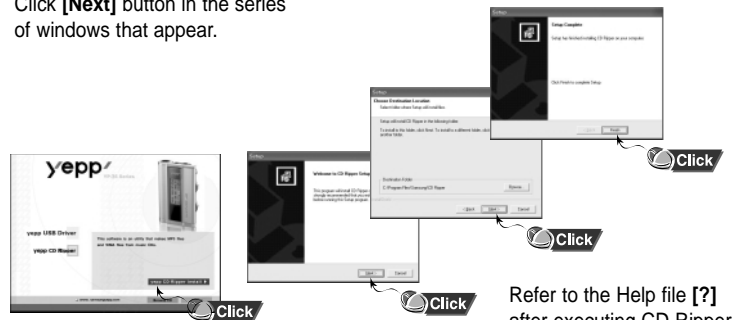


Note : When you install the CD-Ripper, Windows displays "for Windows 98", but you can use it with Windows 2000 and XP as well.

Listening to Music with yepp

First, insert the battery and connect the earphones to the player.

Playing Music (Power On)

 
When you press the ►/■ button, the yepp logo appears and a music/voice file is played.

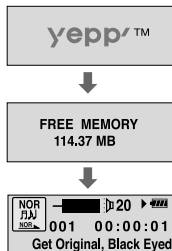

Stopping Music (Power Off)

When you press the ►/■ button while playing, the music stops. If no buttons are pressed within 10 seconds (changes depending on settings), the yepp automatically powers off.

 - You can also turn off the power by pressing and holding the ►/■ button on the main body.

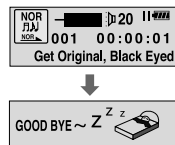

Note : ● WMA files can only be played at bit rates between 48Kbps and 192Kbps.
[supplied by Windows Media Player (Ver 8.0)] WMA files less than 48Kbps may not be played.
● Power off time can be set in the MENU mode.

 
Setting up Volume/Hold Functions

Adjusting the Volume

Press the +/− button on the side of the yepp player to adjust the volume while playing.

Note :

- Volume ranges from 00 to 30.
- Press to adjust the volume by one level.
Press and hold to increase
or decrease the volume in greater increments.

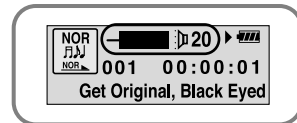

HOLD Function




Under Hold mode, buttons will not work.

 
Slide the HOLD switch on the player in the direction of the arrow.

- Buttons on the yepp player will not work.
- When a button is pressed, "HOLD!" message will appear on the display.



Changing Modes


- 1 Press the  button briefly while the player is stopped.
- 2 Move to the mode you want by using the  button, and then press the  button.

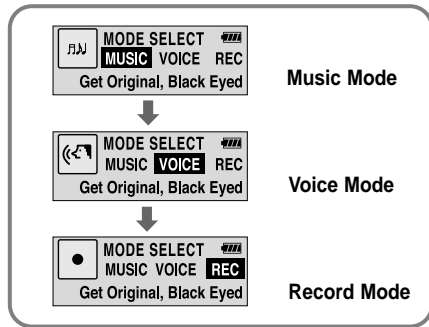

Note : ● You will exit from the Mode Switching function if no action is taken for 10 seconds or if another button is pressed during mode switching.

 
Recording Voice

To Record Voice

- 1 Recording will begin when Recording Mode is selected in Mode Switching.
- 2 Recording will pause when the  button is pressed. Press the button once again to recommence recording.
- 3 When the Mode button is pressed, recording will stop, a voice file will be created, and you will be switched to Voice Mode.

Note :

- The number of saved voice files and hours available for recording will be displayed when Record Mode is selected while the player is stopped.
- Recording is done in the order of V001,V002....
- When memory is full, recording stops automatically.
- The Recording function only activates when the player is stopped.
- The LCD will not illuminate during Voice Recording.

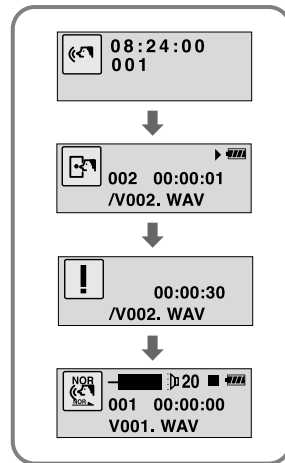


Searching for Music/Voice Files

Note :

- VBR(Variable Bit Rate) file:
MP3 file whose compression rate changes when played.
- With VBR files, pressing the ◀◀ button within 5 seconds from the start of the track may not result in the previous track playing.
- With VBR files, the actual running time may differ from that of the player display.
- This player may not play back MPEG1 LAYER1 files.


Searching for Specific Parts in PLAY Mode

 - Press and hold the ◀◀/▶▶ button while playing to find the part you want to listen to.
- Release the ◀◀/▶▶ button to resume playing.

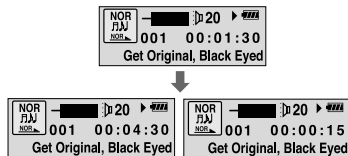


Searching for Music Files in PLAY Mode.

 - Press the ▶▶ button briefly to play the next track.
- Press the ◀◀ button briefly within 5 seconds from the start of the track to play the previous track. Press the ◀◀ button briefly after 5 seconds from the start of the track to play from the beginning of the current track.

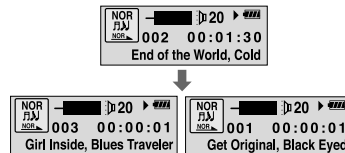

Searching for Music Files in STOP Mode.

 
- Press the ◀◀/▶▶ button in STOP mode to skip to the previous or next track.

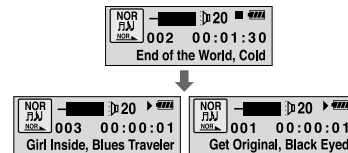


Loop Repeating

Loop Function


Starting Point

While playing music files, press the  button briefly at the beginning of the loop you want to set.

  
A++ blinks in the display.




 
Ending Point

Press the  button briefly again to set the end of the loop.

A++B appears in the display.
The loop is played repeatedly.

 


Note :

- Press the  button briefly to cancel the loop.
- Set "A" section and move to B section with  button to set "B" section

Setting up SRS (Sound Retrieval System)

- 1 Press the **SRS** button while in Music Mode.
- 2 Press and hold the **SRS** button briefly to select the mode you want.

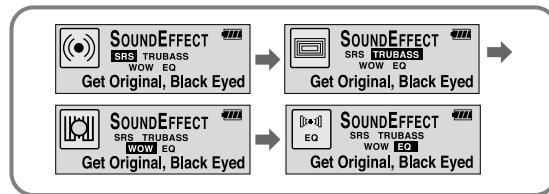


- **SRS** : You will hear 3D Stereo sound.
- **TRUBASS** : This is a bass boost feature that adds fullness to the sound.
- **WOW** : This feature allows you to enjoy the SRS and Trubass features simultaneously.
- **EQ** : Plays at the last EQ setting you made.


Note :

 
- **SRS** is a trademark of SRS Labs, Inc.
WOW technology is incorporated under license from SRS labs, Inc.
- Please adjust the volume to a suitable level, as the volume may increase in the SRS setting.
- This unit supports sampling frequencies of 32KHz, 44.1KHz or 48KHz..

Setting up MENU

To switch to Menu Mode, press and hold the  button while in Music/Voice Mode.

Press the  button briefly to select the menu you want.

To exit from Menu Mode, press and hold the  button once again.

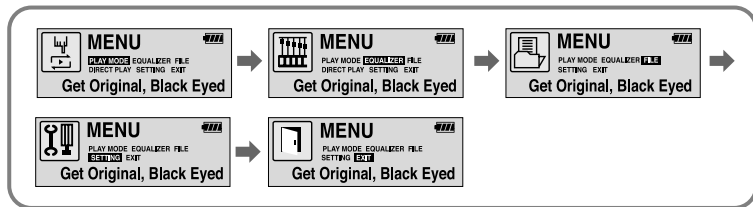

- **PLAY MODE** : To select track repeating mode.
- **EQUALIZER** : To use equalizer function.
- **FILE** : To delete or format music files.
- **SETTING** : To change the basic setup options of the display.
- **EXIT** : To exit MENU.

Note :

 
- In MENU mode, no input for 10 seconds will cancel the MENU mode.
- Menu mode will be released if any button other than the Volume +/- button is pressed.

Repeating Tracks

Track Repeating Function

1 In **MENU**, select **PLAY MODE**. (refer to “Setting up MENU”)

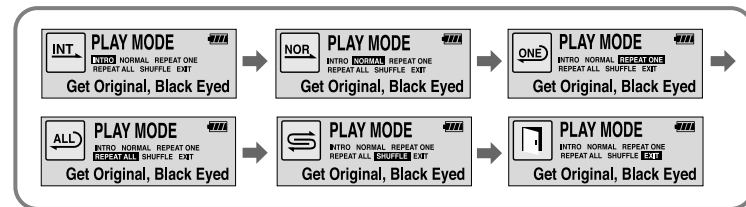

2 In **PLAY MODE**, use the  button to move to the mode you want and press the  button to select.

 


- **INTRO**: To play the first 10 seconds of each track.
- **NORMAL**: To play all the tracks in order one time.
- **REPEAT ONE**: To repeat one track.
- **REPEAT ALL**: To repeat all tracks.
- **SHUFFLE**: To play tracks at random.
- **EXIT**: To move to the upper press.

Setting up EQ

EQ Function

- 1 In **MENU**, select **EQUALIZER**. (refer to “Setting up MENU”)
- 2 In **EQ**, use the  button to move to the setting you want (out of the 4 settings) and press the  button to select.
 - Select the DBB Mode if you want to fine-tune the sound.
- 3 If you want to manually adjust the equalizer, select **User** and **Bass/Treble**.
 - The adjustment range of Bass/Treble is 0 to 10.

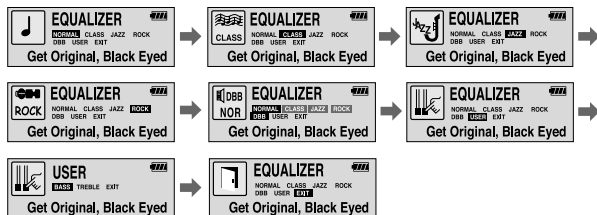


Note :

- DBB is for Dynamic Bass Booster, which enhances bass response.

Managing Files

Deleting

- 1 In **MENU**, select **FILE**. (refer to “Setting up MENU”)
- 2 In **FILE**, select **DELETE** and the mode (Music or Voice) the target file is in.
- 3 Move the Volume button to the file you want to delete, and then press the  Mode button. Select **CANCEL** to cancel.





Formatting

2 In **File**, select **FORMAT**.



- ## Setting Function

2 In **SETTING**, use the  button to move to the function you want to change and select the function by using the  button.




DISPLAY

- **PLAY TIME:** displays current play time
- **REMAIN TIME:** displays remaining play time
- **USED SIZE:** displays using memory
- **FREE SIZE:** displays remaining memory




BACK LIGHT

- Use the  button to set the Backlight "ON" time.
- The setting range of backlight-on time is 0 to 10 seconds.
- * The backlight does not illuminate when the residual battery level is insufficient.



BEEP


- Use the  button to set the BEEP mode.
- **BEEP ON:** A beep sounds each time a button is pressed.
- **BEEP OFF:** No beep sounds when a button is pressed.

Note :

- No beep sounds while playing or recording of a music/voice file even when set to 'BEEP ON'.




CONTRAST

- Use the  button to set the Contrast.
- The setting range of the contrast, which adjusts the brightness of the screen, is 0 to 10.




Continued...

SCROLL SPEED

- Use the  button to set the Scroll Speed.
- The setting range of the scroll speed, which adjusts the speed of the track title flow, is 0 to 10.

 


POWER OFF TIME


- Use the  button to set the Power Off Time.
- The setting is 5 different levels ranging from 0 to 25 seconds. The power will turn off after the set time if no button is pressed when the playback ends.

 
Note :

- When '0 second' is set, the power will not turn off but will remain in Standby Mode.




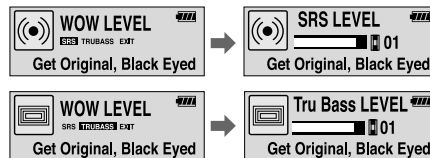 
DEFAULT VOLUME

- Use the  button to set the Default Volume.
- The default volume setting range of the unit is 0 to 25. If the Volume is above 25(26-30) when you turn the device off, it will default to 25 when the device is turned back on.
- If the Volume is set to 25 or lower when you turn the device off, it will return to that setting when it is turned back on.



WOW LEVEL

- The levels of SRS and TRUBASS can be adjusted.
- Select the mode you want by using the  button.
- The level for SRS and TRUBASS can each be set within the range of 0 to 10.



Continued...

 
Firmware Upgrade

1 Download the latest Firmware from www.samsungyepp.com

2 Install the latest Firmware program on your PC.

3 Connect to the USB port on your PC using the USB cable or adapter while holding the play button on the main body. When the play button is pressed for longer than 5 seconds, the 'Player Recovery Device' message will appear on the Device Manager as shown in the picture below.


4 Run the upgrade program.

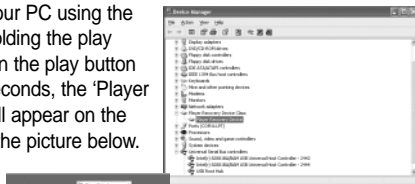

5 When the program is running, the screen will show the progress.



 6 The upgrade window will appear when the Recovery process is complete. Click Start to begin the upgrade.

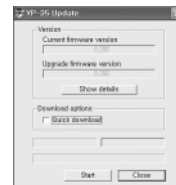

7 The upgrade is complete.



8 Reconnect the USB for the driver to be newly recognized.

Note :

- When the Quick Download option is deselected, formatting will commence at the same time, and the saved file will be deleted.

Description of Buttons (yebb player)


BUTTON	STATUS	PRESSING LENGTH	RESPONSE
▶ / ■	Power Off	Longer than 2 Seconds	Power On, and play
	Play	Short	Pause(When no button is pressed for 10 seconds, yebb powers off automatically) Press and hold the 2 seconds Power Off.
	Intro Play	Short	Cancels Intro, returns to Play mode
▶▶	Play	Short	Play the next track
	Play	Longer than 2 Seconds	Fast forward search in PLAY mode
	Stop		Skip to the next track
	Pause		Play the next track
	MENU Mode		Cancel MENU

◀◀	Play	Short	Within 5 seconds from the start: Play the previous track After 5 seconds from the start: Play the beginning of the current track.
	Play	Longer than 2 Seconds	Fast reverse search in PLAY mode
	Stop		Skip to the previous track
	Pause		Play the previous track
+ - Volume	Play or Stop Mode		Volume increase/decrease
	MENU Mode		Move MENU
+ - Mode	Play	Short	Set the starting point for loop function
	During Loop Setting	Short	Loop mode
	Loop Mode	Short	Cancel loop mode
	Stop	Short	Changing modes (music ↔ voice ↔ Recording)
	Play or Stop Mode	Longer than 2 Seconds	Enter MENU
	MENU Mode		Selection/Exiting MENU

MENU Table

MENU

 ● Select with the  button and move.

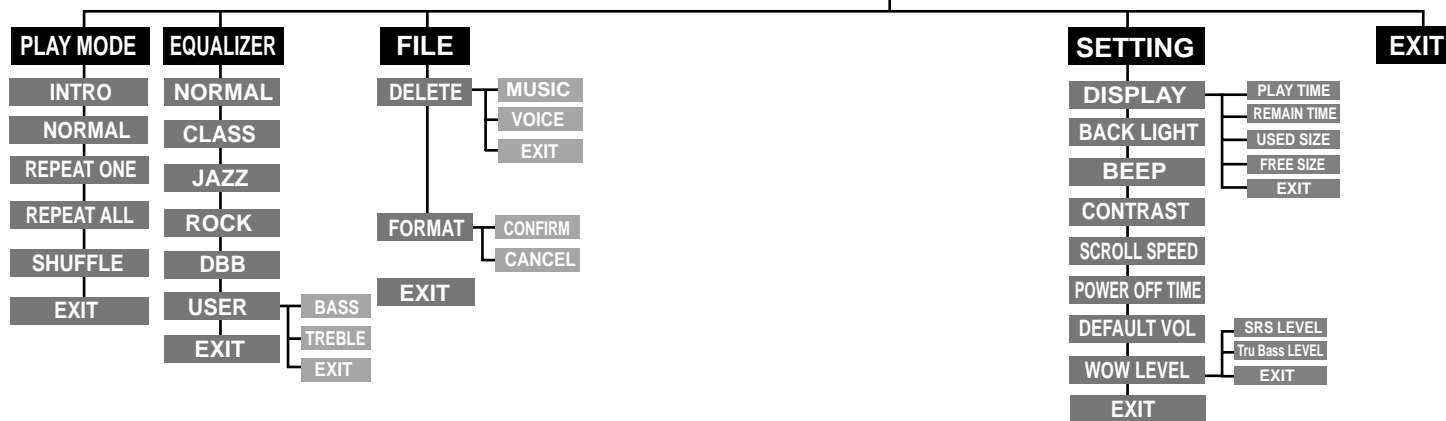

Troubleshooting

yepP does not work and the LCD displays nothing.

- Check the battery capacity
- Check to see if the battery is inserted to the right poles (+ , -)

In PLAY mode, music is not played after pressing the ►/■ button

- Check to see if MP3 or WMA files are saved in the built-in memory.
- Check to see if the HOLD switch is locked.
- Check if the memory is full.

Files cannot be downloaded.

- Check to see if the driver is installed correctly in the computer.
- Check the connection between yepP and computer.
- Check and/or replace the battery, turn on the yepP's power.
- The Windows98 operating system limits the number of files you can save.
Please save your music files by creating a subfolder.

Backlight does not work.

- Check the backlight setup.
- When the battery power is low, the backlight will go out.

The buttons do not work.

- Check setting of Hold switch.
- When the message "Please Reformat" is displayed, please format your YP-35 by installing the software using Windows Explorer.

yepP keeps being turned off.

- In Stop mode, the power is automatically turned off after ten seconds (changes depending on settings).
- Check to see if there are files saved in it.

Something's wrong with play time displayed during Play mode.

- Check if it plays a VBR (Variable Bit Rate) file.
The time display of a VBR file is inconsistent.
- The time may be incorrect for high compressed (bps) files.

LCD window is dark

- Check Contrast

Specifications

Model	YP-35
Built-in Memory capacity	64MB(YP-35 S) / 128MB(YP-35 H)
Voltage	1.5V X 1 (AAA/LR03 size alkaline battery)
Playing time	lasts up to 15hours (Alkaline battery, MP3 128Kbps, Vol level 20)
Dimensions/Weight	2.62 X 1.77 X 0.65 inches / 1.04 oz (without battery)
Case	Plastic / Aluminum
Noise Ratio	80dB with 20kHz LPF (1KHz 0dB)
Earphones Jack Output Power	5mW(Max 10mW)/CH (16 Ω)
Output Frequency Range	20Hz ~ 20kHz
Operating Temperature Range	-5 ~ +35°C (23 ~ 95F)

Memo

Safety Information

FCC Part 15: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, this notice is not a guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the distance between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician.

Modifications

Any changes or modifications not expressly approved by the grantee of this device could void the user's authority to operate the device.

Compliance

This product conforms to the following Council Directive:

- Directive 89/336/EEC, 92/31/EEC(EMC)

Declaration of Conformity

Name: Samsung Electronics Co., Ltd
Address: 416, Maetan-3Dong, Paldal-Gu, Suwon
City, Kyungki-Do, Korea 442-742

declares under its sole responsibility that the product

Trade Name: Samsung Electronics Co., Ltd

Model Number: YP-35

has been tested according to the FCC/CISPR22/95
requirements for Class B devices and found
compliant with the following standards

EMI/EMC: AnSI C63.4 1992, FCC Part 15 Subpart B

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, including interference that may cause undesirable operation.

Party Responsible for Product Compliance

Samsung Electronics America
QA Lab.
3351 Michelson Dr. Suite #290
Irvine, CA92612

Warranty

Samsung warrants this product as free of defects in material, design and workmanship for the period of twelve(12) months from the original date of purchase.

If during the period of warranty this product proves defective under normal use and service, you should return the product to the retailer from whom it was originally purchased. The liability of Samsung and its appointed maintenance company is limited to the cost of repair and/or replacement of the unit under warranty. Return of the product for defective reasons should be to the original purchaser, however Samsung Authorized Dealers and Authorized Service Centers will comply with the warranty on the terms issued to purchasers in the country concerned, for further information relating to the Authorized Service Centers contact. 1-800-SAMSUNG (1-800-726-7864) www.samsungyepp.com

WARRANTY CONDITIONS:

1. The warranty is only valid when the warranty card is properly completed, and upon presentation of the proof of purchase consisting of original invoice or sales slip confirmation, indicating the date of purchase, dealers name, model, serial No. and product number. Samsung reserves the right to refuse warranty service if this information has been removed or changed after the original purchase of the product from the dealer.
2. Samsung's obligations are to the repair of the defective part, and at its discretion, replacement of the product (service exchange unit).
3. Warranty repairs must be carried out by an Authorized Samsung Dealer/Service Center. No reimbursement will be made for repairs carried out by non Samsung Centers, and warranty coverage will not be valid for any repairs or damage caused by such repairs.
4. Repair or replacement under the terms of this warranty does not give right to extension to or a new starting of the period of warranty. Repair or direct replacement under the terms of this warranty may be fulfilled with functionally equivalent service exchange units.

5. The warranty is not applicable in cases other than defects in material, design and workmanship. The warranty does not cover the following:

- ◆ Periodic checks, maintenance, repair and replacement of parts due to normal wear and tear.
- ◆ Abuse or misuse, including but not solely limited to the failure to use this product for its normal purposes or in accordance with Samsung's instructions usage and maintenance.
- ◆ The product has been used in conjunction with accessories not approved by Samsung for use with this product.
- ◆ Failure of the product arising from incorrect installation or use not consistent with technical or safety standards in current force, or failure to comply with product manual instructions.
- ◆ Accidents, Acts of God or any cause beyond the control of Samsung caused by lightning, water, fire, public disturbances and improper ventilation.

- ◆ Unauthorized modifications carried out for the product to comply with local or national technical standards in countries for which the Samsung product was not originally designed.
 - ◆ Repairs performed by non-authorized service centers such as opening of the product by a non-authorized person.
 - ◆ The model, serial No. and product number on the product has been altered, deleted, removed or made illegible.
6. This warranty does not affect the consumers statutory rights nor the consumers rights against the dealer from their purchase/sales agreement.

THERE ARE NO EXPRESS WARRANTIES OTHER THAN THOSE LISTED AND DESCRIBED ABOVE, AND NO WARRANTIES WHETHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, SHALL APPLY AFTER THE EXPRESS WARRANTY PERIODS STATED ABOVE, AND NO OTHER EXPRESS WARRANTY OR GUARANTY GIVEN BY ANY PERSON, FIRM OR CORPORATION WITH RESPECT TO THIS PRODUCT SHALL BE BINDING ON SAMSUNG, SAMSUNG SHALL NOT BE LIABLE FOR LOSS OF REVENUE OR PROFITS, FAILURE TO REALIZE SAVINGS OR OTHER BENEFITS, OR ANY OTHER SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES CAUSED BY THE USE, MISUSE OR INABILITY TO USE THIS PRODUCT, REGARDLESS OF THE LEGAL THEORY ON WHICH THE CLAIM IS BASED, AND EVEN IF SAMSUNG HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES. NOR SHALL RECOVERY OF ANY KIND AGAINST SAMSUNG BE GREATER IN AMOUNT THAN THE PURCHASE PRICE OF THE PRODUCT SOLD BY SAMSUNG AND CAUSING THE ALLEGED DAMAGE, WITHOUT LIMITING THE FOREGOING, PURCHASER

• ASSUMES ALL RISK AND LIABILITY FOR LOSS,
• DAMAGE OR INJURY TO PURCHASER AND
• PURCHASER'S PROPERTY AND TO OTHERS AND
• THEIR PROPERTY ARISING OUT OF THE USE,
• MISUSE OR INABILITY TO USE THIS PRODUCT SOLD
• BY SAMSUNG NOT CAUSED DIRECTLY BY THE
• NEGLIGENCE OF SAMSUNG. THIS LIMITED
• WARRANTY SHALL NOT EXTEND TO ANYONE
• OTHER THAN THE ORIGINAL PURCHASER OF THIS
• PRODUCT, IS NONTRANSFERABLE AND STATES
• YOUR EXCLUSIVE REMEDY.

• Some states do not allow limitations on how long an
• implied warranty lasts, or the exclusion or limitation
• of incidental or consequential damages, so the
• above limitations or exclusions may not apply to
• you. This warranty gives you specific legal rights,
• and you may also have other rights which vary from
• state to state.
• This product is for personal use only, and is only for
• use in compliance with the limitations of copyright
• and other laws.

To obtain warranty service, please contact
SAMSUNG at:
Samsung Electronics America, Inc.
400 Valley Road, Suite 201 Mount Arlington, NJ
07856
Tel: (973) 601-6000, Fax: (973) 601-6001
1-800-SAMSUNG (1-800-726-7864)
www.samsungyepp.com
081299